





Stand one set of legs upright, and feed a bolt through the hole at the top. Add a washer to the bolt on the interior side.

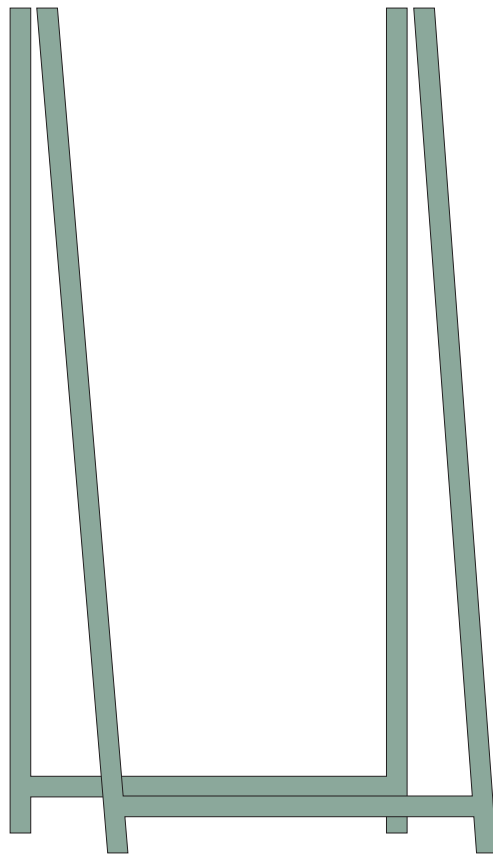

Angle the second set of legs to align bolt holes. One leg should be inside the first set and the other should be outside.

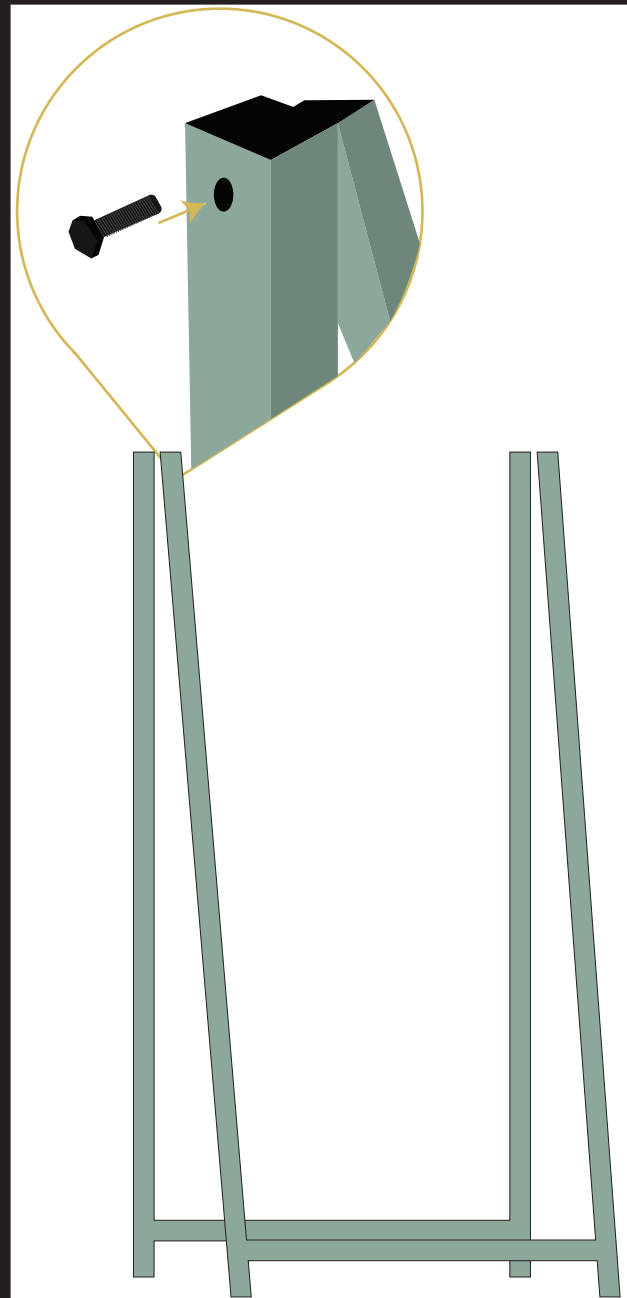


Feed initial bolt through second leg. Add another washer to the bolt on the interior side.

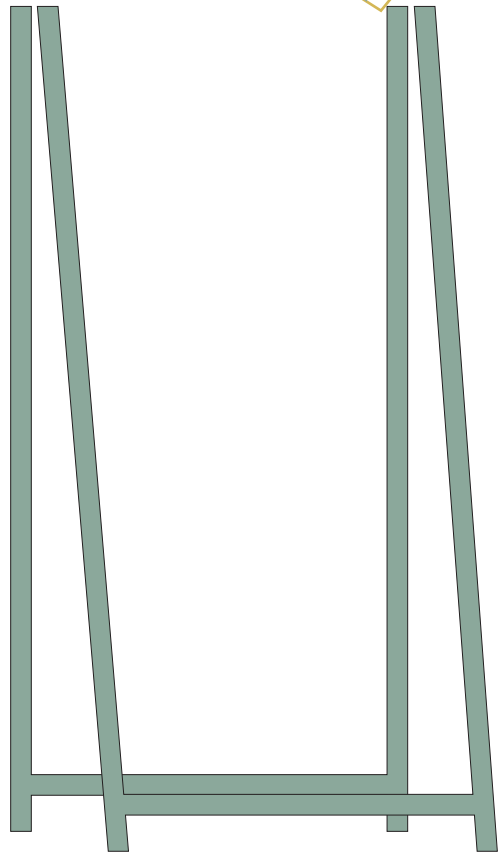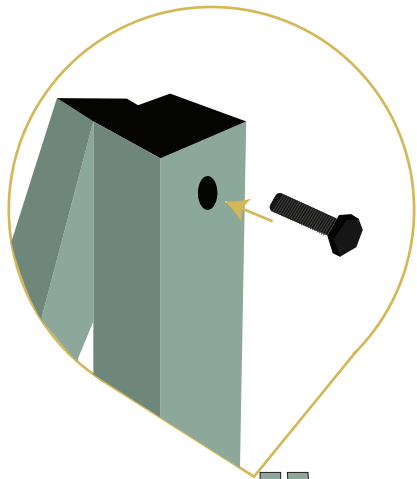

Repeat on the other side, ensuring there is a washer on the bolt between the legs.


Tighten
washer locations

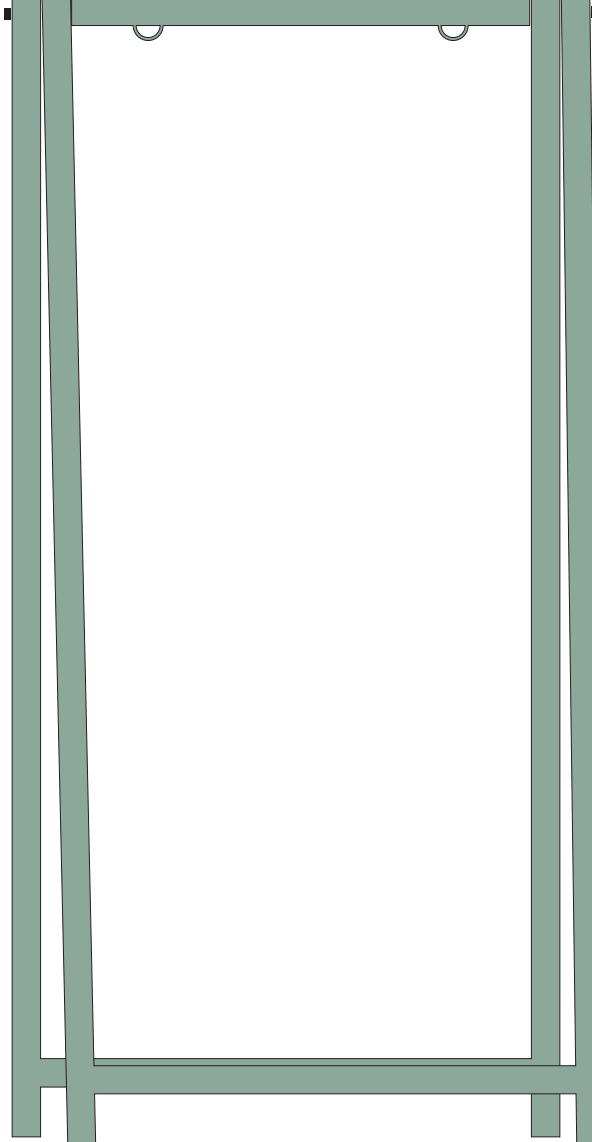

Place a washer on each bolt as it reaches the interiors of the sign legs. Align center beam and tighten bolts into it.



Set sign frame aside. Feed one end link of chain onto Chicago screw.

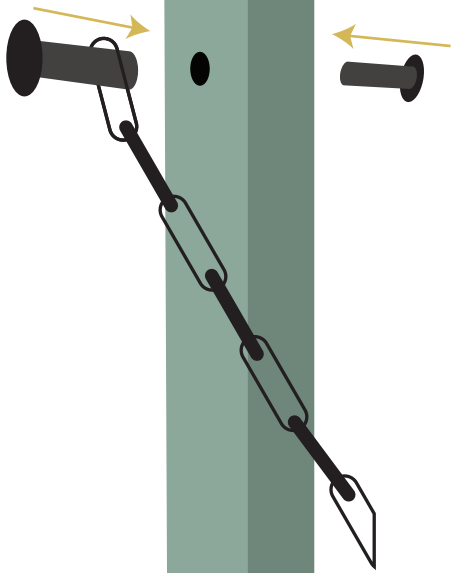

Feed Chicago screw through chain hole partway down sign leg and secure with screw cap. Repeat for remaining legs.



Hang signboard from center beam.

Feel free to call or email if you run into any questions! You can reach us at (719) 221-3171, or by email at hello@ovierre.com.